SYSTEMS
Office Furniture

Remanufactured Herman Miller Aeron

PostureFit

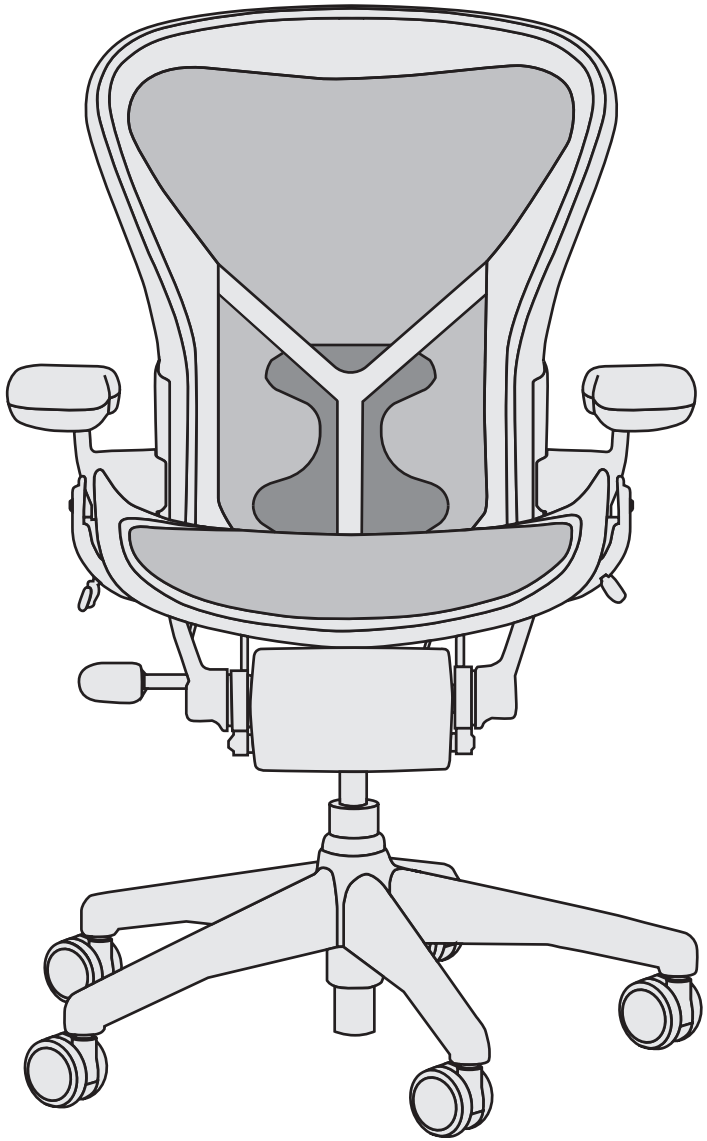

Assembly Code: 6-1

Have a question or need help with assembly? Reach out to us.

Monday - Friday
8:00 am - 5:00 pm CST
979.776.2100
SystemsOffice.com

If you are missing parts or discover defects and/or damage while assembling this product, you could be eligible for a replacement free of charge. We are always here to help.

Visit Our Assembly Page

SystemsOffice.com/assembly

© Systems Office Furniture

What's in the box?

Seat Back

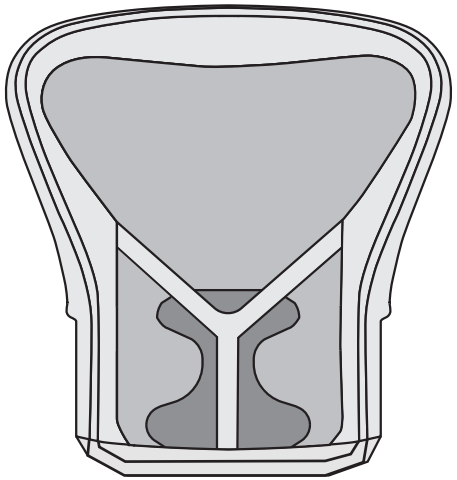

#2 Screwdriver



Allen Key

Partially Assembled Seat Base

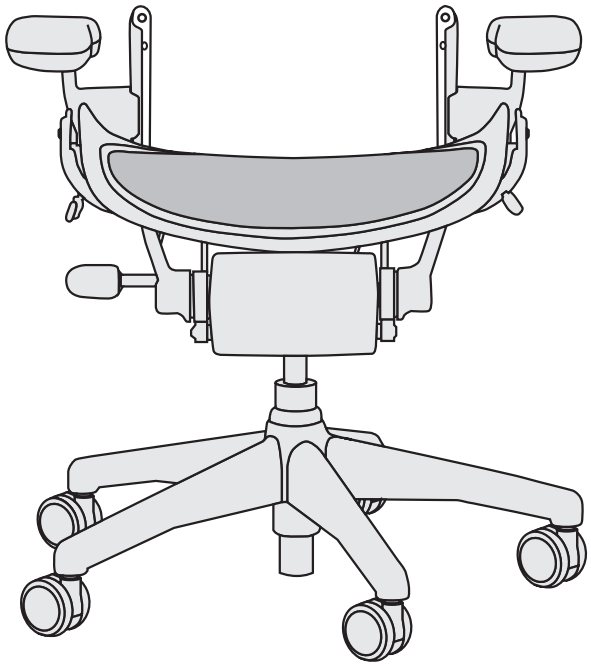

Seat Bolts (4)

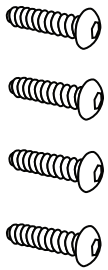

Step One

Place the base on the floor and line the **Seat Back** up with all four holes.

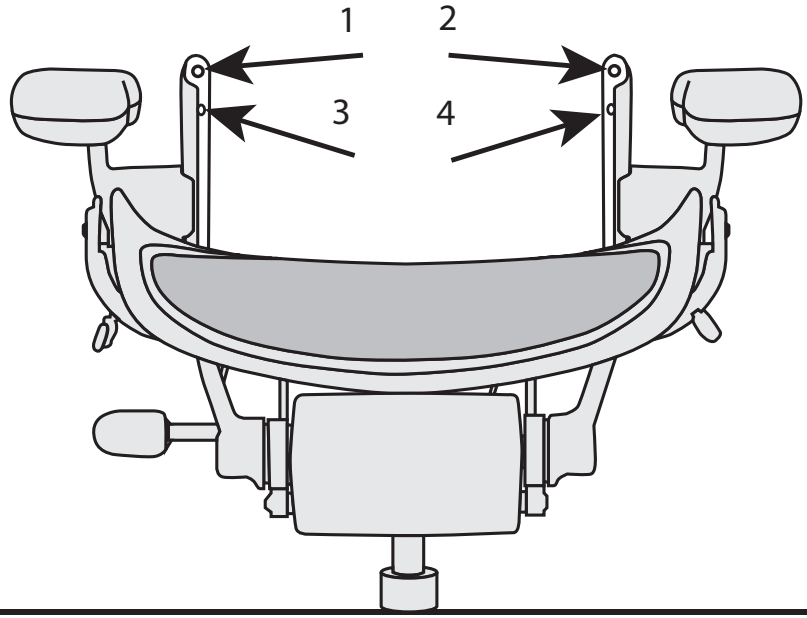

Step Two

Hand tighten the screws to set them in place. Starting at the top, use the provided Allen Wrench to tighten all 4 screws counter-clockwise. Enjoy!

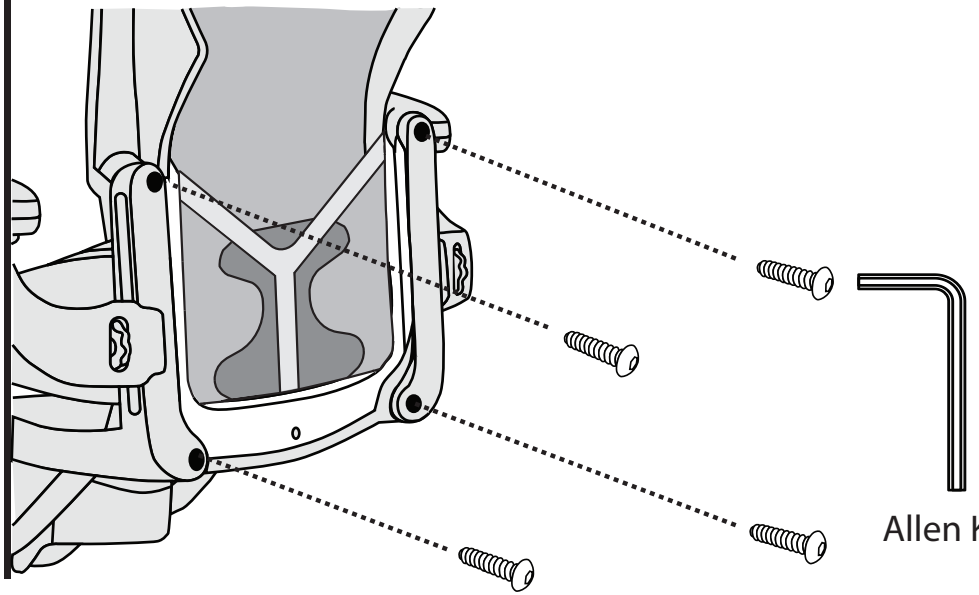

Allen Key

© Systems Office Furniture

Step Three

Locate cable and mounting clip under seat pan. Clip the bracket on the chair, lining up the two holes for the set screw. Make sure the holes align.

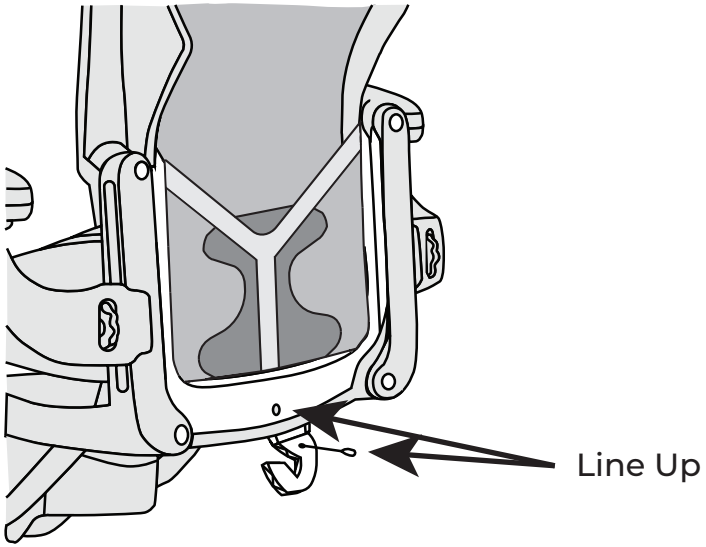

Step Four

Support the bracket with your hand while you hand tighten the screw back into place with the screwdriver provided.

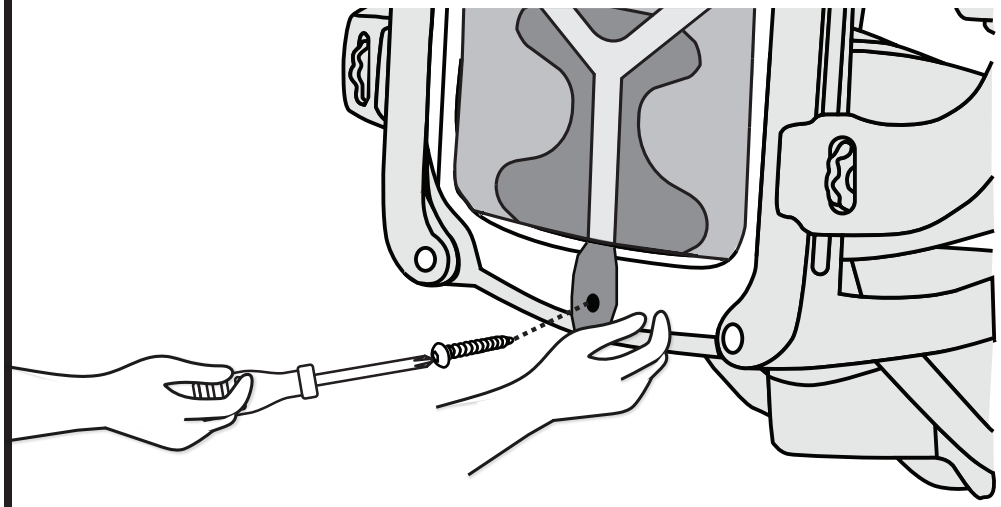

Step Five

Guide the cable through the hole with your fingers then slide down. Press the bottom of the Y of the PostureFit to meet the cable.

Note: If the cable is too short, loosen it by turning the PostureFit dial on the side of the chair.

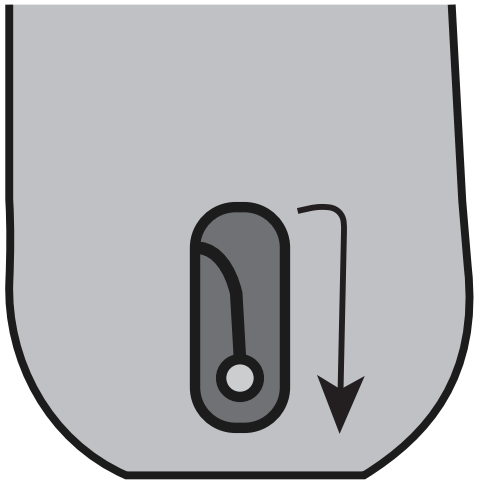

Step Six

Enjoy your chair!

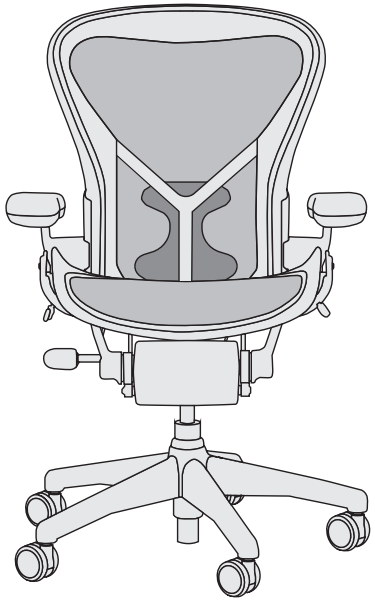

© Systems Office Furniture