




SYSTEMS
Office Furniture

**Pre-Owned Herman Miller
Embody Task Chair
Partial Assembly**

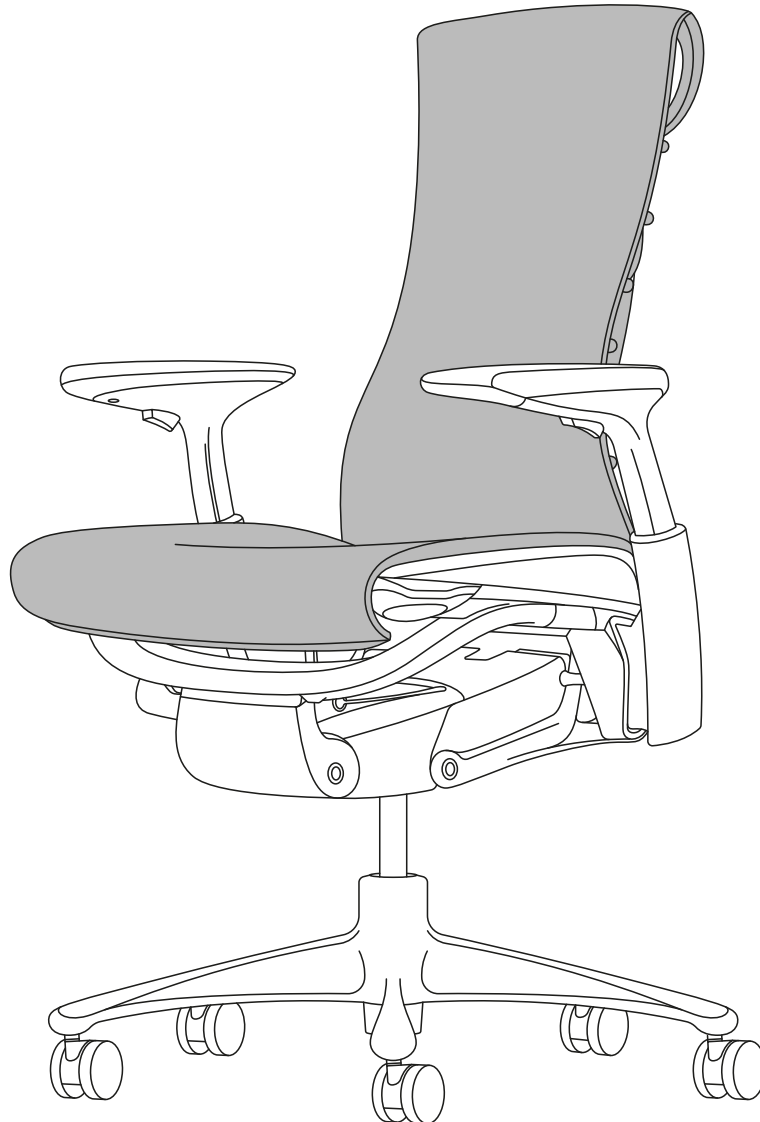

**Assembly
Code: 24-1**

Have a question or need help with assembly? Reach out to us over live chat, email, or phone.

Monday - Friday
8:00 am - 5:00 pm CST
979.776.2100 ext 114
SystemsOffice.com
orders@systemsoffice.com

Visit Our Assembly Page




Systemsoffice.com/assembly

To fill a claim go to
Systemsoffice.com/claims


What's in the box?

Partially Assembled Chair Body

Chair Body

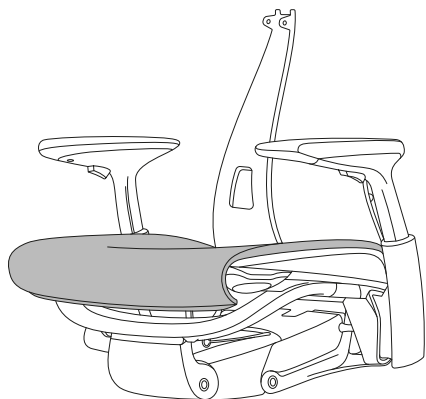


Chair Back

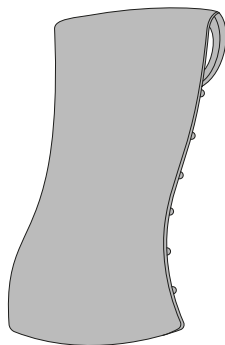

Cylinder



5 Star Base

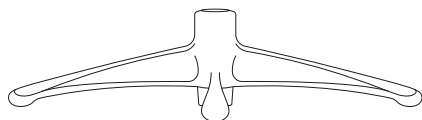


Casters (5)




Step One

Press casters (5) into 5 star base

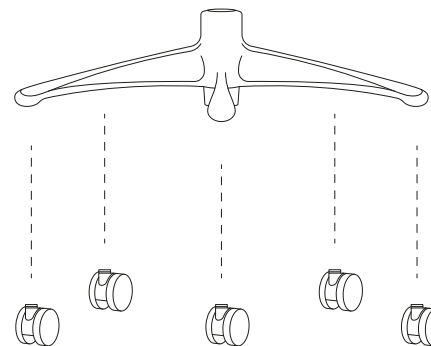


Step Two

Press cylinder into base

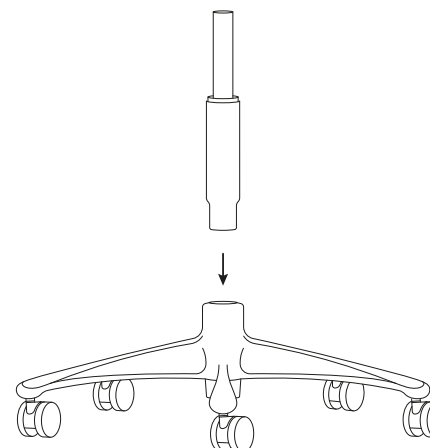


Step Three

Place chair body on cylinder shaft with the cable activated lever facing away from the cable end.

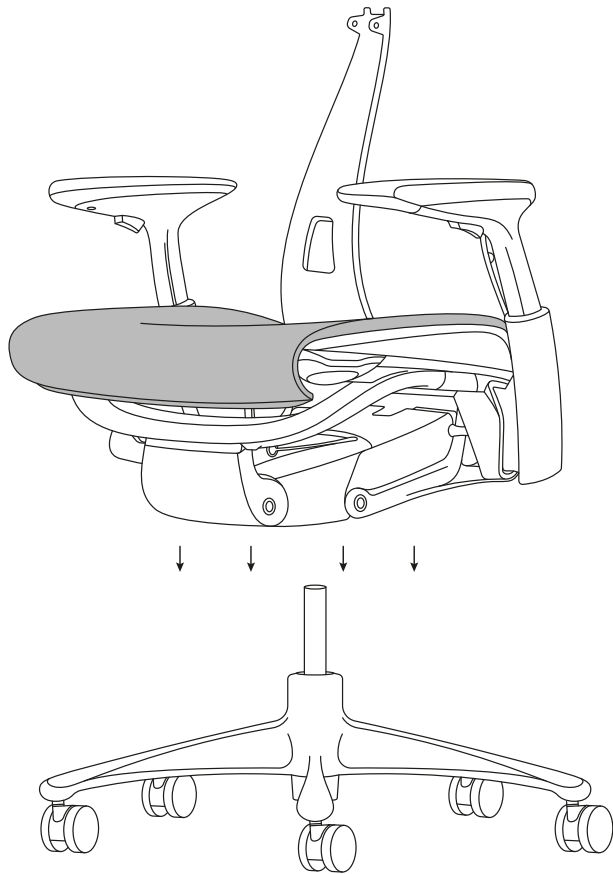


Step Four

Hook cable ball end on the activation lever and snap the plastic collar into place.

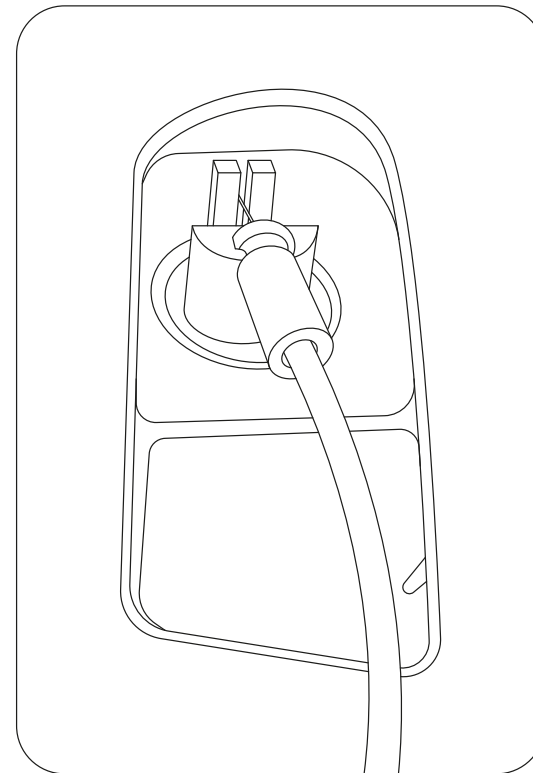


Step Five

Place chair back on chair body and align screw holes.

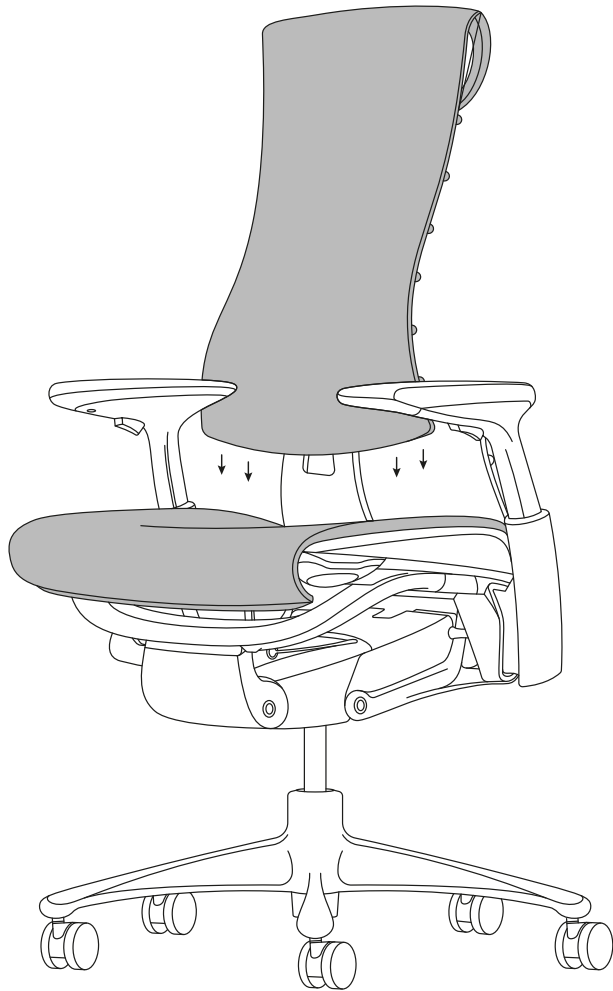


Step Six

Fasten (2) screws at the chair back base and tighten using the provided allen key.

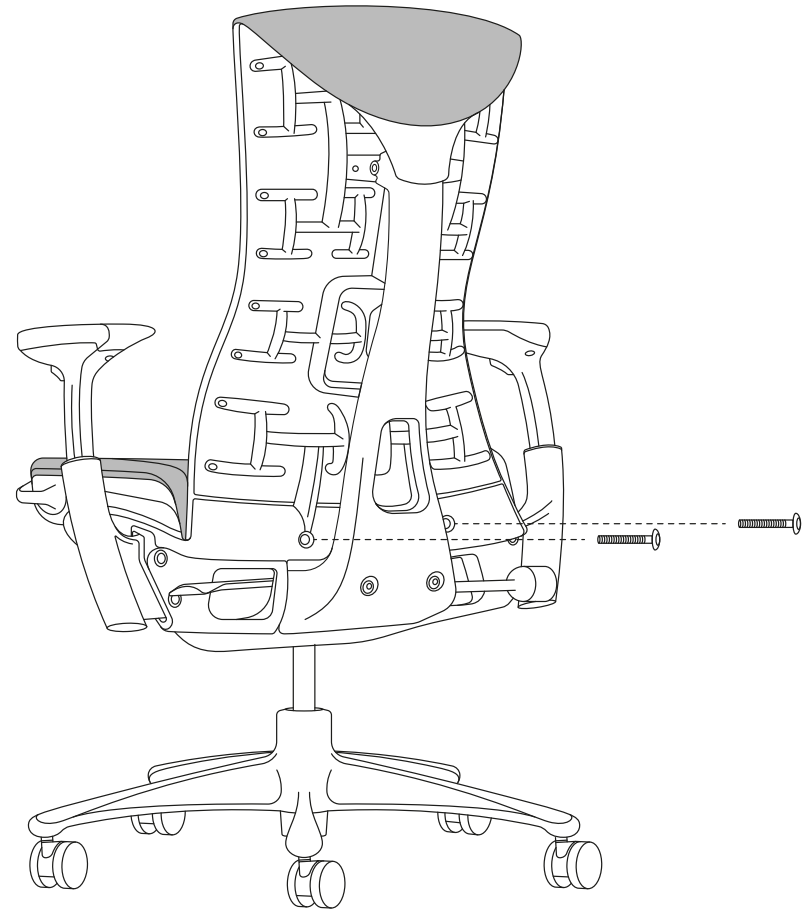


Step Seven

Align the chair back pin holes and insert the pin.

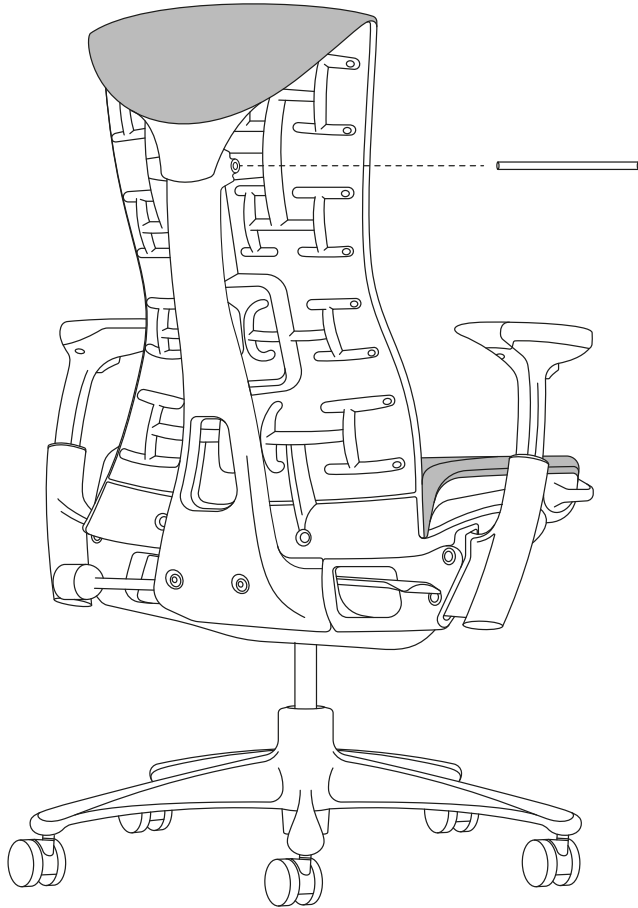

Step Eight

Take both black plastic clips and identify by looking inside them to see which one is for the left and which is for the right. Snap them into place and secure them with the provided screws. Then tighten those screws with a Phillips screwdriver
*Not provided.

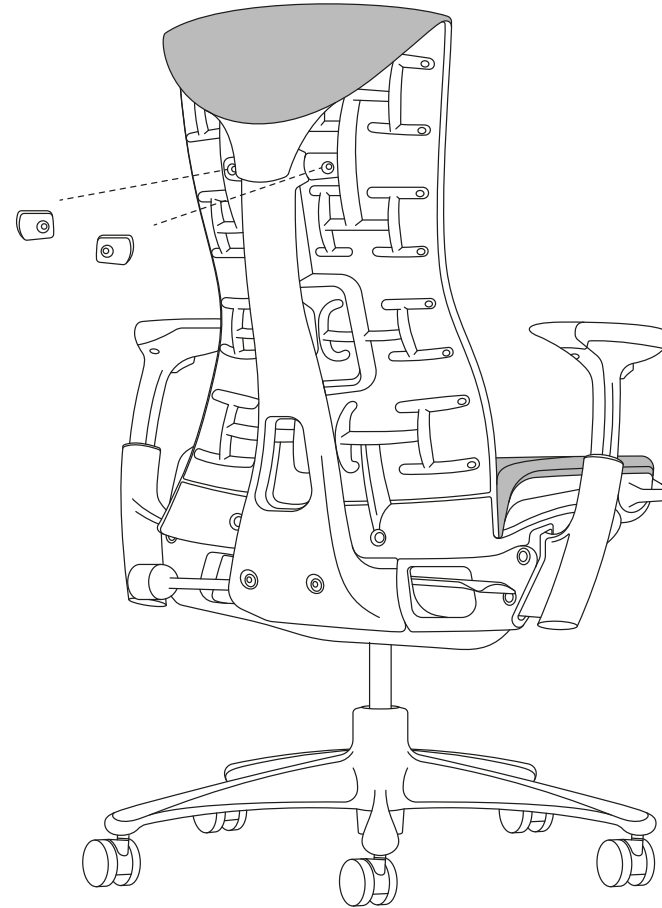

Enjoy your Chair!