
SYSTEMS
Office Furniture

Refurbished Humanscale Smart Ocean

Partial Assembly

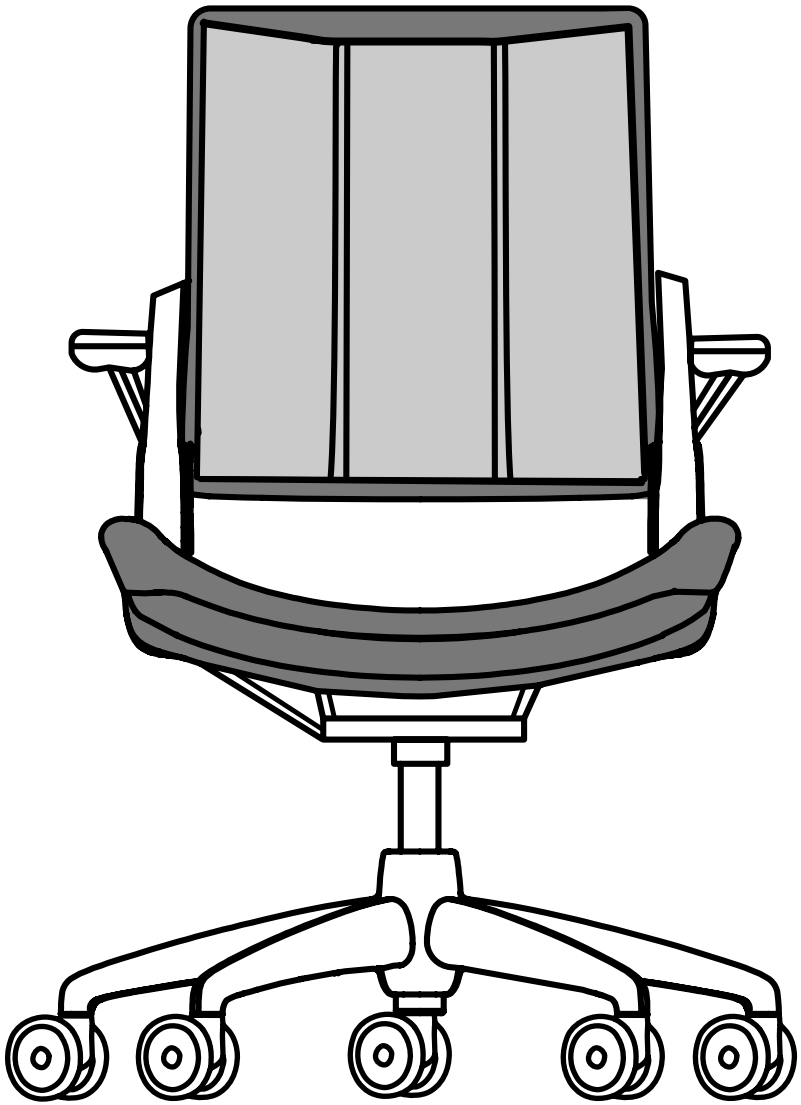

Assembly Code: 18-1

Have a question or need help with assembly? Reach out to us.

Monday - Friday
8:00 am - 5:00 pm CST
979.776.2100
SystemsOffice.com

If you are missing parts or discover defects and/or damage while assembling this product, you could be eligible for a replacement free of charge. We are always here to help.


Visit Our Assembly Page

SystemsOffice.com/assembly


© Systems Office Furniture

What's in the box?


Partially Assembled Chair Body

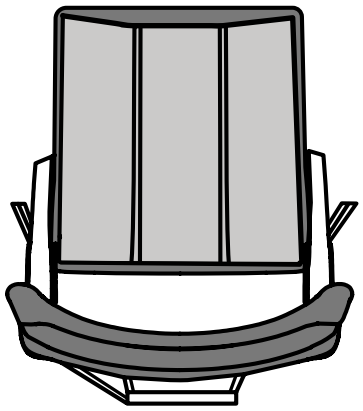


Screws (14)

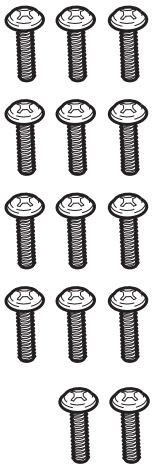


Left Side Arm Rest

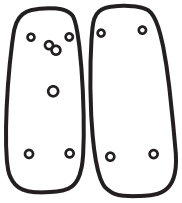

Cylinder




Right Side Arm Rest

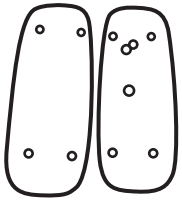

5 Star Base



#2 Screwdriver




Casters (5)




Step One

Press all (5) casters into the base until they snap into place.

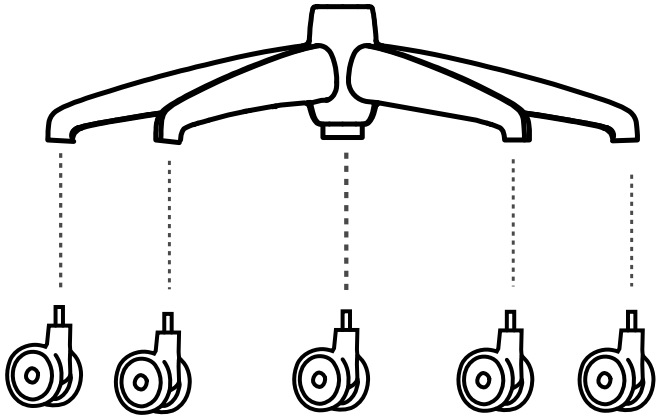


Step Two

Insert the **Cylinder** into the **5 Star Base.**

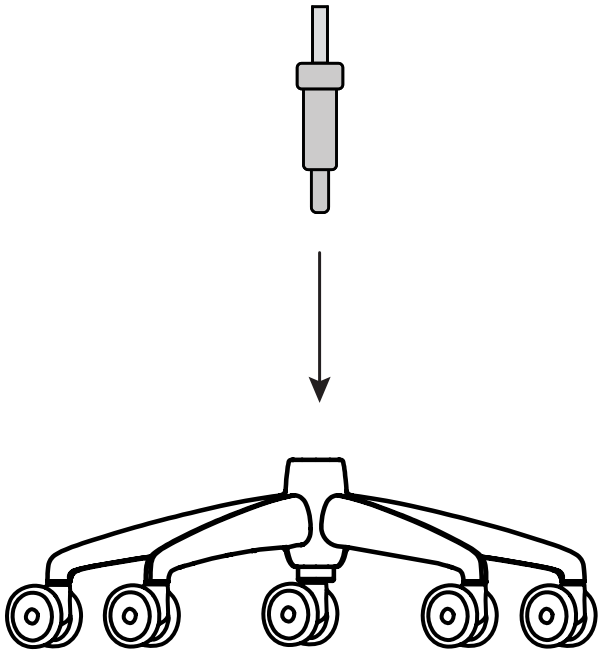

Step Three


Place the **Chair Body** on the **Cylind**
Sit in the chair after assembly to ensur
the **Cylinder** is locked into place. Enj

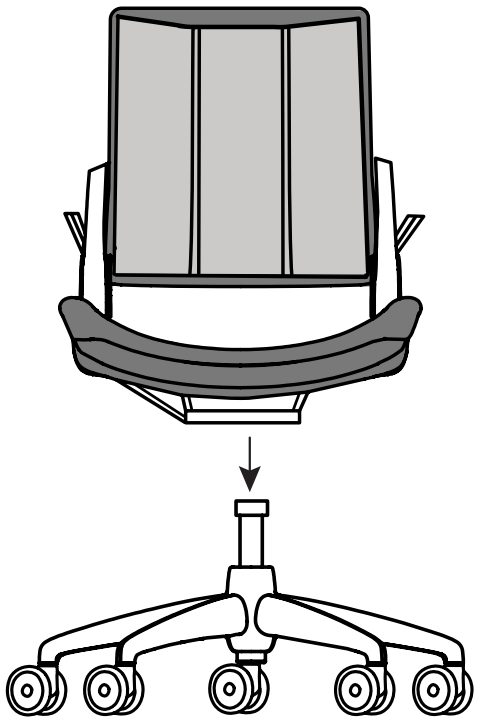

© Systems Office Furniture


Step Four

Identify left and right **Arm Rests**. Use the corresponding **Arm Rest** and align the bottom half to the arm of the chair. Secure in place from the top down into the chair arm using three screws.

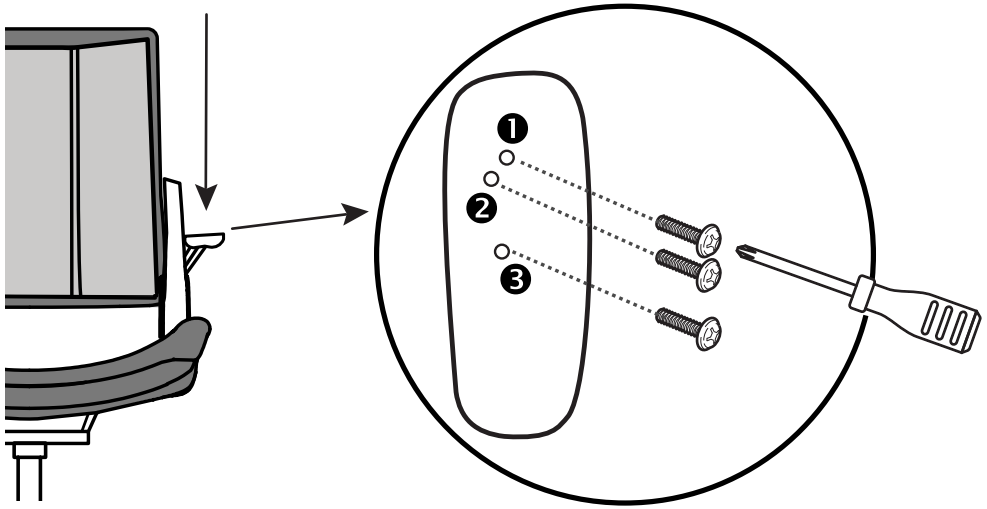


Step Five

Insert a screw into each of the four holes on the underside of the chair arm.

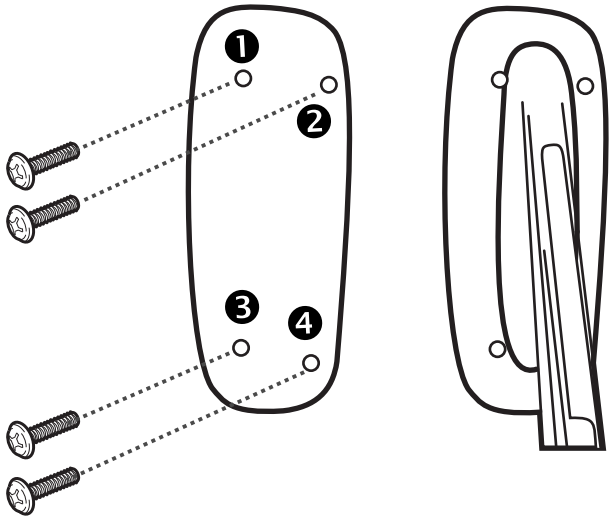


Step Six

Position the top half of the **Arm Rest** to align with the screws and hand tighten from the underside one at a time. Then tighten using the provided screwdriver taking care not to over tighten.

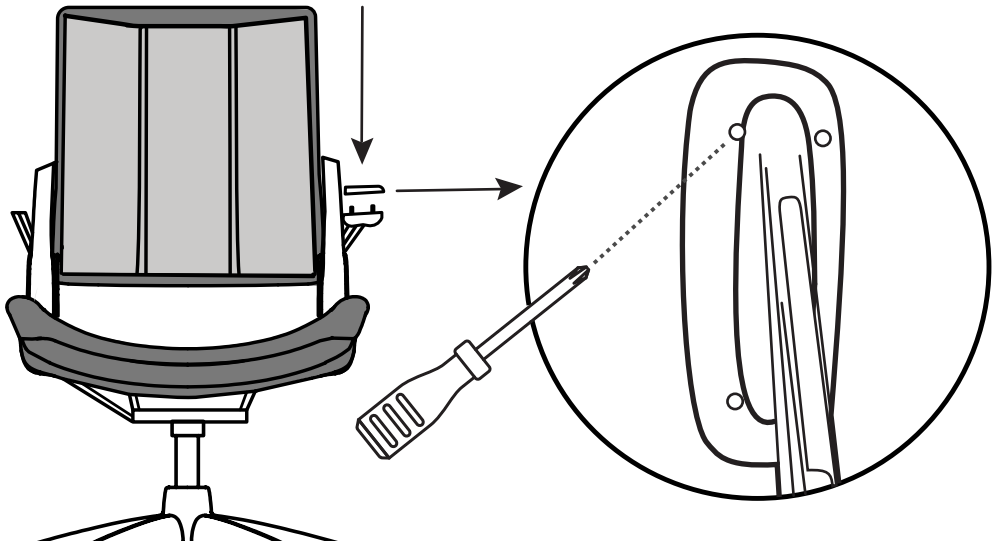

Step Seven

Repeat steps four, fix, and six for the other chair arm. When finished, sit in the chair and test the **Arm Rests** making sure they are not too loose and function properly. Enjoy your chair!

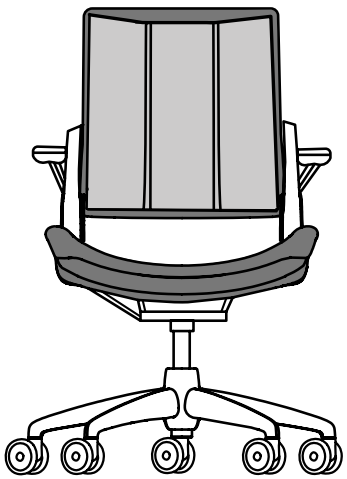

© Systems Office Furniture